



Assembly Instructions



Completed assembly with mobility handle in transport position.

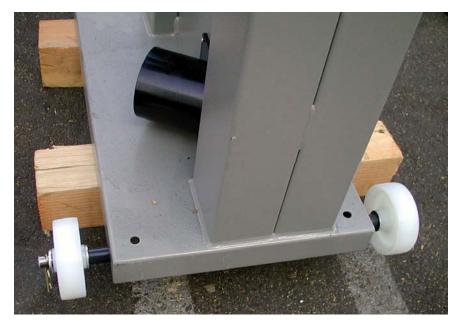

Back wheel assembly completed.

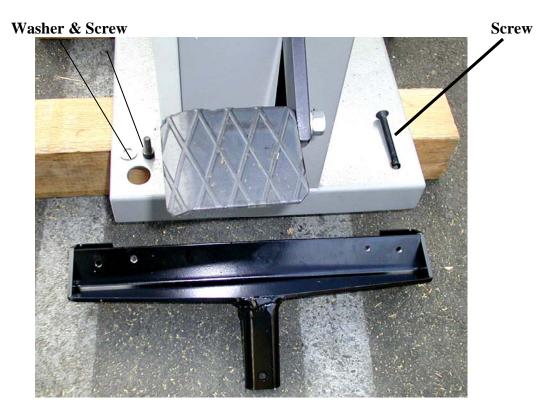

Front Bracket with screws and washers. The number of tapped holes may vary depending on the bracket supplied.



Front bracket fitted with front block removed.



Rest the band saw on 2"x4" wood or similar. Fit the shaft through the base of the band saw. Fit wheels, washers and split pins as shown. Discard extra washers and spacers, as they are only required if fitting the shaft to the 16" Basic/SEC band saws.



Completed rear shaft assembly.



View of front bracket with fitting screws. NOTE: the number of tapped holes may vary depending on the bracket supplied.



Front bracket fitted.



Completed assembly with mobility handle in transport position.